


Solenoid valve(3/2 way)

3V1 Series



AirTAC



Series connection

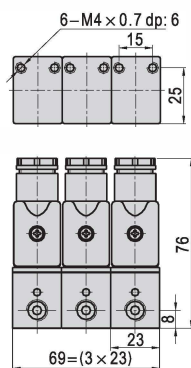

Dimensions(1F)

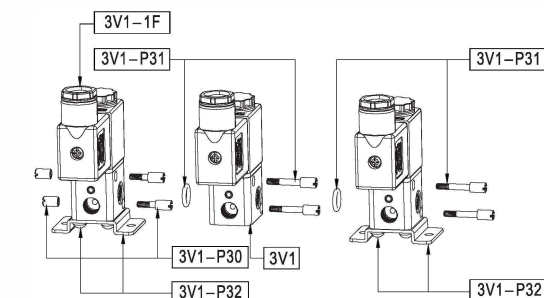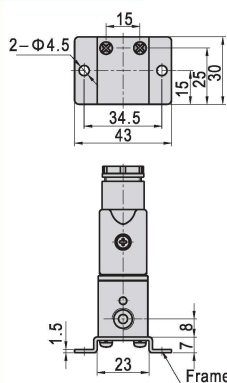

Product structure

Connection Amount	Q. TY	3V1	3V1-P30	3V1-P31	3V1-P32
3V1-□-□-1F	1	0	0	1	
3V1-□-□-2F	2	1	1	1	
.....		1			
3V1-□-□- nF	n	1		n-1	2

Note: n is the number of junction valve, and n ≥ 3

Ordering code for series

3V1 06 A □ 3F □

Model	Port size	Voltage	Electrical entry	Thread type	Number of stations
3V: Solenoid valve(3/2 way)	M5: M5 06: 1/8"	A: AC220V B: DC24V C: AC110V E: AC24V F: DC12V	Blank: Terminal I: Grommet	Port size Thread type 1/8" Blank: PT T: NPT G: G M5 Not this code	1F: 1 Station 2F: 2 Station 3F: 3 Station 20F: 20 Station

The above codes have included the series accessories, so it is unnecessary to order the accessories specially. But if you like, you could order as follows.

Code of accessories	Accessory name	Part code	Part name	Quantity
3V1-P30	Coupling screw assembly	F-3V1002B	Coupling screw(S)	2
		F-3V1003B	Coupling screw(M)	2
3V1-P31	Coupling screw assembly	GOR20008N75	O-Ring	1
		F-3V1004B	Coupling screw(L)	2
		F-3V1001B	Fixed mounting	1
3V1-P32	Bracket assembly	GSDA04008ZA	Cross round head screw	2